

Decorative & Finish Panel

INSTALLING A FINISHED OR DECORATIVE BACK PANEL

1. Retrieve the Decorative Back Panel and place it near the installation location with the finished side facing outward.
2. With the help of a second person, carefully lift the panel into position. Align the edges with the cabinet base, ensuring it sits flush and square.



PRO TIP: Using Construction Jacks can make positioning and alignment significantly easier, especially for larger panels.

3. Hold or brace the panel in place while securing it temporarily with trigger clamps to prevent movement (Figure 1).
4. From inside the cabinet, drill three evenly spaced pilot holes along the top edge at points 1, 2, and 3. Install one #8 × 1-1/4" stainless steel screw into each pilot hole and tighten securely. (See Figure 2.)
5. Repeat the fastening process along the bottom inside edge at points 4, 5, and 6, and along the center edge at points 7 and 8. Ensure all fasteners are fully secured and the panel is firmly attached before removing any clamps.



PRO TIP: Do not drill or drive screws into the decorative groove of the panel. Keep all fasteners within 1 inch of the top, sides, and bottom edges to avoid the groove.

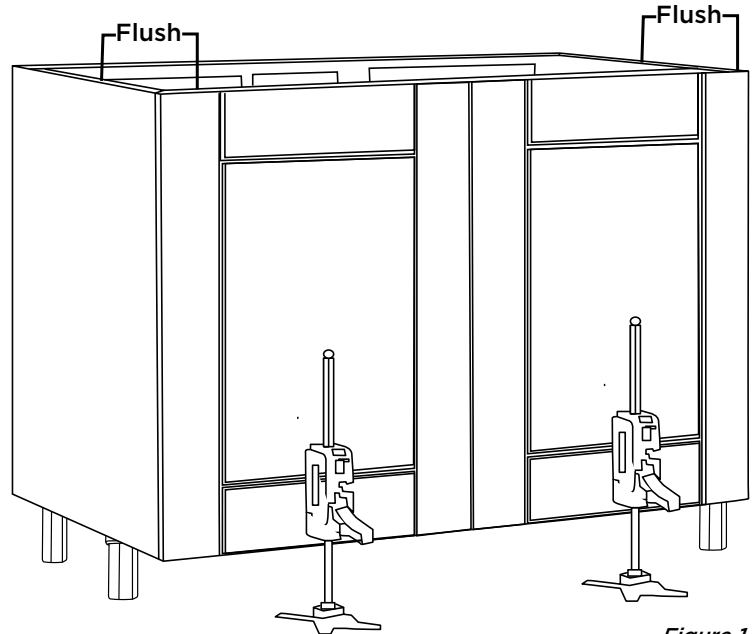


Figure 1

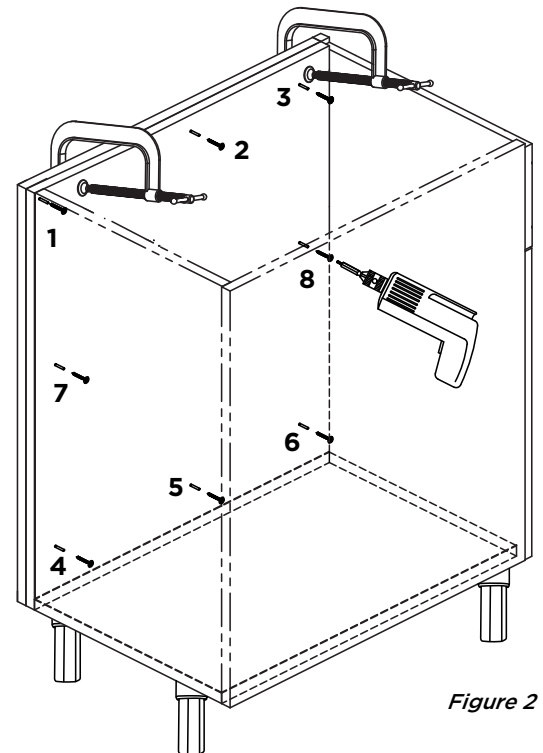


Figure 2